

Art. 8632 FPP-Wax melter

Date last modified: 15-8-2022, Changes reserved for printing- and typing errors.

Product image



Product information

The FPP-wax melter is a tank that works according to the au-bain-marie system. The water in the tank is kept at the set temperature by means of a thermostat-controlled element. The thermostat can be set to the correct temperature with the digital thermostat on the outside. It is important that the water in the tank remains at the correct level for the appliance to function properly. The tank is equipped with a standard filling hole at the top. Never put too much water in the tank. This is to prevent boiling over. In the unlikely event that there is not enough water in the tank, the appliance is protected against overheating when boiling dry. However, Prevent this by checking the water level daily.

Installation

1. Always place the melting tank on a stable surface.
2. Make sure the faucet is in the closed position.
3. The melting tank is ready for commissioning.

Use of appliance

1. Fill the tank with water.
2. Put the plug in the socket. The tank will immediately start heating.
3. By pressing the 'set' button on the thermostat, you can see what temperature the tank is set to. This is changeable by the arrow buttons.

Note!

The melting tank is provided with a heating element with a relatively low power. It can take several hours for the tank to reach full temperature. Keep this in mind. The tank is built for continuous use. However, if the boiler is not to be used for a longer period of time, always switch it off by removing the plug from the socket. Never use the melting tank for improper use. This is to prevent damage and increase the lifespan. Improper use also invalidates the warranty.

Safety

The kettle is equipped with a dry boil/overheating protection and switches off automatically when necessary. This can be reset by pressing the button to the right of the thermostat.

Cleaning

1. Switch off the appliance and remove the plug from the socket.
2. Remove the water from the tank through the faucet at the bottom of the tank.
3. Fill the tank with clean water and a descaling agent (art. 7149).
4. Let the tank heat up to about 60 degrees for a while to remove all the lime.
5. Empty the tank. Rinse with clean water and any cleaning agent.
6. Rinse the soapy water well and dry everything thoroughly before using it again.

To optimize the life of the melting tank, we recommend descaling the tank regularly!

Specifications

Volume water tank	+/-150Liter
Length	168mm
Width	300mm
Height (adjustable)	350mm
Wattage	1800Watt
Voltage	230Volt
Thermostat setting	30-100°C
Maximum thermostat	✓
Isolated	✓
Faucet	✓

Warranty


The melting tank comes with a one-year warranty against material and construction defects, provided that the device has been used and maintained in accordance with the instructions. Also, the melting chain must not be mishandled or abused in any way. This only applies to parts, not to labor and transport. In the event of malfunctions, please contact your supplier in order to have the malfunction resolved with the original parts.

Warning: as this involves heating a liquid, operation of the melting tank should only be done by qualified personnel.

The device complies with EU directives 73/23 EEC and 89/336 EEC, all technical changes reserved.



Electric scheme

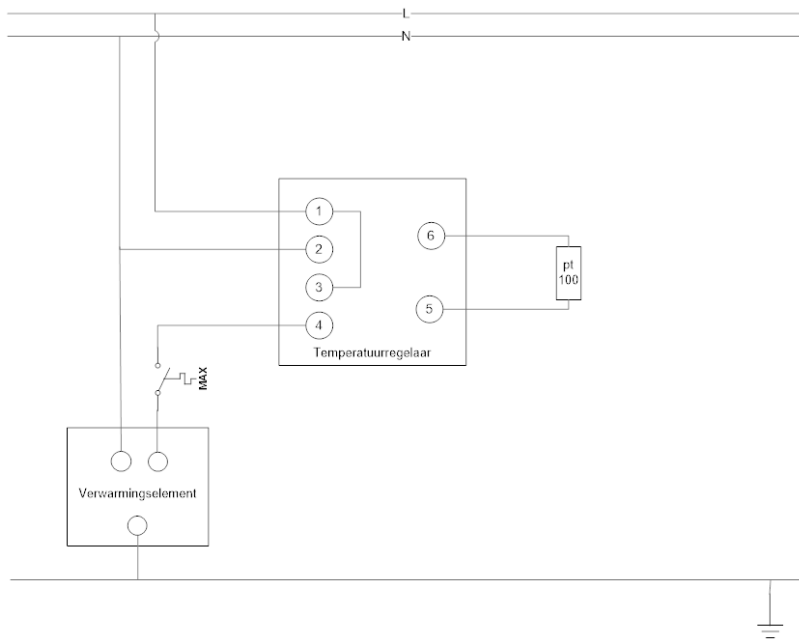

Always read the manual before using the device