

Art. 8725 Melting device ASB2843

Date last modified: 5-8-2022, Changes reserved for printing- and typing errors.

Product image



Product information

The melting device ASB2843 is a heated device for flattening dipping and pouring candles in a simple manner. The plate is provided with a spout to drain the excess melted candle wax. This is collected by a collecting tray, which must be placed under the plate. Below the device are two elements, which are switched by a temperature control and an overheating protection. In the event of overheating, the device switches itself off and can only be reset internally. When switched on, the light in the switch lights up.

Optionally available is a lid for the melting pot (8725.02). A rack for the melter (item no. 8725.04) is also optionally available. This is a fixed copy. The plunger/dipping candles are hung on this to melt. Pouring candles are melted by placing them on the supplied plate and flattening them yourself.

Installation

1. Always place the melter on a stable surface.
2. Place the female plug in the melter and insert the plug into an earthed socket with 230 Volt.
3. Switching on the device is done by turning the switch to 'On' (the light will now light up). Switching off is done by turning the switch back to 'Off'.
4. The melter is ready for use.

Use of appliance

1. Place a container under the spout. Coat the plate with a layer of paraffin until the bottom is covered. Never allow to heat without paraffin!
2. Switch on the appliance by plugging in the mains plug and turning the switch to 'On'.
3. Wait until the plate has heated up completely and the paraffin has melted (approx. 1 hour heating time).
4. When the device has reached full temperature, the excess paraffin will flow through the spout into the container.
5. Hang the plunger/dipping candles straight on the rack so that the bottom hangs slightly in the liquid paraffin. Over time, the candles have melted straight down. Place pouring candles with the bottom on the plate and melt the bottom of the candle with a rotating movement. Make sure the candle is held horizontally.
6. Always switch off the appliance after use by turning the switch to 'Off' and removing the plug from the socket. This prevents anything from going wrong at all times.

Note!

The melting device needs time to heat up (approx. 1 hour). The block can get hot, but it won't get extremely hot. Take this into consideration. Never use the melting plate for improper use. This is to prevent damage and increase the lifespan. Improper use also invalidates the warranty.

Cleaning

1. Switch off the appliance and remove the plug from the socket.
2. To clean the plate, it is wise to remove as much of the paraffin layer as possible. The plate is

- easy to clean with polishing paper while it is still warm.
3. Attention! Never bring the device into contact with water.
4. After this cleaning, the device is ready for use again.

Specifications

Length	250mm
Width	200mm
Wattage	80Watt
Voltage	230Volt

Warranty

The melting device comes with a one-year warranty against material and construction defects, provided that the device has been used and maintained in accordance with the instructions. Also, the melting chain must not be mishandled or abused in any way. This only applies to parts, not to labor and transport. In the event of malfunctions, please contact your supplier in order to have the malfunction resolved with the original parts.

Warning: as this involves heating a liquid, operation of the melting tank should only be done by qualified personnel.

ATTENTION:

Always place a lid on the melting pot or make a number of holes in the paraffin if there is still a layer of solidified paraffin in the device when the device is switched on. If this is not done, the melting paraffin can expand and splash.

With a simple action you avoid extra cleaning work!


The device complies with EU directives 73/23 EEC and 89/336 EEC, all technical changes reserved.



Always read the manual before using the device



Electric scheme

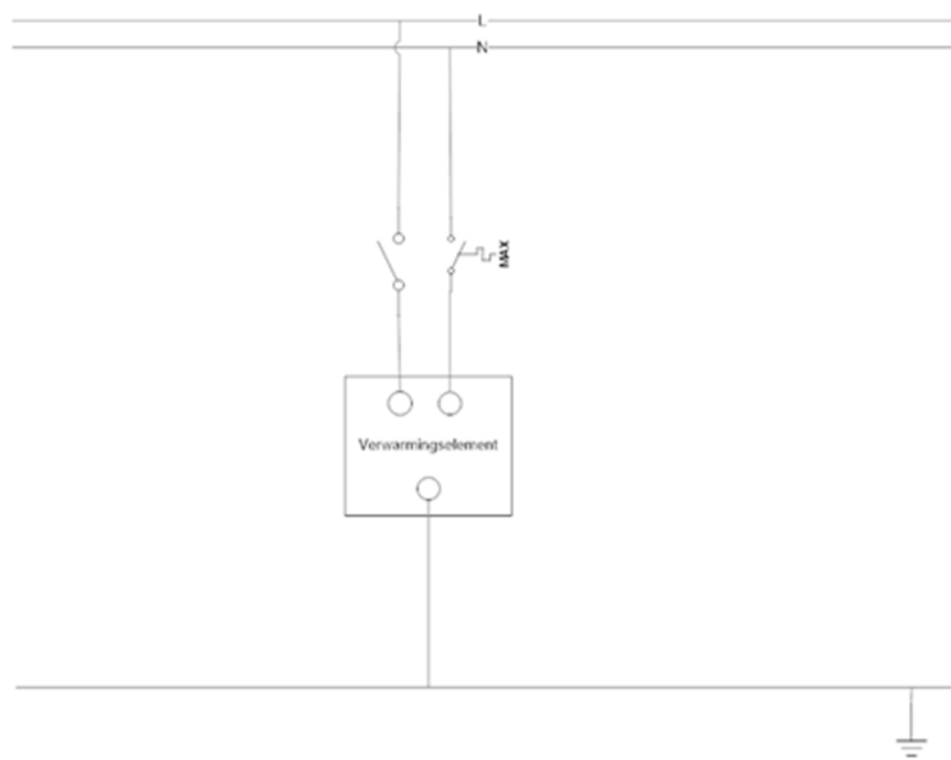

Always read the manual before using the device

SELLACQHOLLAND Morseweg 1 8503 AH JOURE T+31(0)513-499657 E info@sellacq-holland.nl

www.sellacq-holland.nl